### **FUOCOFREDDO**

Via Licinio Ferretti 5/A 43126 Parma (PR) C.F. / P.IVA 02669720340 Tel. 0521.1404565 info@fuocofreddo.it www.fuocofreddo.it

# SENSORE DI PRESENZA 103058-UV



# On/off Control HF Sensor

# 103058-UV

Super-compact Version

# **Applications**

Occupancy detector with on/off control suitable for indoor use.

Suitable for building into the fixture:

- Office / Commercial Lighting
- Meeting rooms
- Classroom

Use for new luminaire designs and installations



### **Features**

Zero crossing detection circuit reduces in-rush current and prolongs relay life



5 year warranty

# Technical Data

### Input Characteristics

Model No.	103058-UV
Mains voltage	220~240VAC 50/60Hz
Stand-by power	<0.5W
Load ratings:	
Capacitive	400VA
Resistive	800W
Warming-up	20s
Load ratings: Capacitive Resistive	400VA 800VV

### Safety and EMC

EMC standard (EMC)	EN55015, EN61000
Safety standard (LVD)	EN60669, AS/NZS 60669
Radio Equipment (RED)	EN300440, EN301489, EN301489, EN62479
Certification	Semko, CB, CE, EMC, RED, RCM

# C€ emc RED CB IP20

#### Sensor Data

Model No.	103058-UV		
Sensor principle	High Frequency (microwave)		
Operation frequency	5.8GHz+/-75MHz		
Transmission power	<0.2mW		
Detection range	Max. (Øx H) 12m x 6m		
Detection angle	30° ~ 150°		
Setting adjustments:			
Sensitivity	10% / 30% / 50% / 75% / 100%		
Hold-time	5s ~ 30min (selectable)		
Daylight threshold	2 ~ 50 lux, disabled		

#### Environment


Operation temperature	Ta: -35°C ~ +70°C
Case temperature (Max.)	Tc: +80°C
IP rating	IP20




# SENSORE DI PRESENZA 103058-UV

### **FUOCOFREDDO**

Via Licinio Ferretti 5/A 43126 Parma (PR) C.F. / P.IVA 02669720340 Tel. 0521.1404565 info@fuocofreddo.it www.fuocofreddo.it

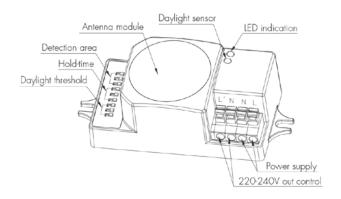

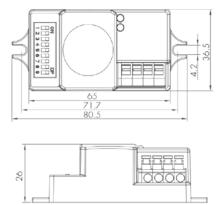













Note:We recommend the mounting distance between sensor to sensor should be more than 2m to prevent sensors from false-triggering.

#### Functions and Features

### On/off Control


This sensor is a motion switch, which turns off the light upon detection of motion, and turns on after a pre-selected hold-time when there is no movement.



The light does not switch on when presence is detected.



The sensor switches on the light automatically after the hold-time when there is no motion detected.

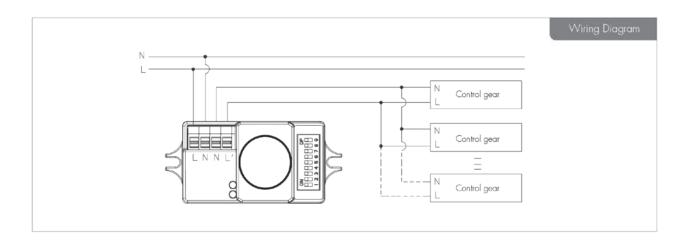

#### **FUOCOFREDDO**


Via Licinio Ferretti 5/A 43126 Parma (PR) C.F. / P.IVA 02669720340 Tel. 0521.1404565 info@fuocofreddo.it www.fuocofreddo.it

# SENSORE DI PRESENZA 103058-UV



# Zero-cross Relay Operation

Designed in the software, sensor switches on/off the load right at the zero-cross point, to ensure that the in-rush current is minimised, enabling the maximum lifetime of the relay.




# B Loop-in and Loop-out Terminal

Double LN terminal makes it easy for wire loop-in and loop-out, and saves the cost of terminal block and assembly time.


# Precautions and usages

- 1. This sensor has 20s warming-up period when powered on. During the 20s warming-up period the light will stay OFF for safety concerns.
- II. In case of power cut or power failure, the status after re-powered on will be "OFF" for safety concerns.
- III. Usage: For maximum UV-light life-span consideration, we recommend to manually switch OFF the UV lights when sterilization is not needed. We recommend customers to select suitable time to carry out sterilization. During the sterilization period, our sensors ensures human safety and switches OFF the UV lights when occupancy detected.

# Detection Pattern

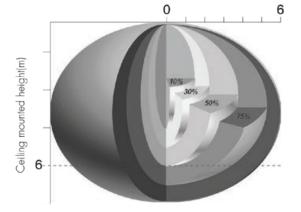

Ceiling mounted detection pattern (m)

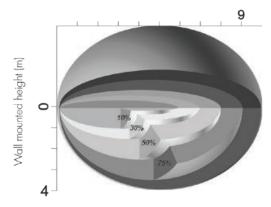

Wall mounted detection pattern (m)

# **DIP Switch Settings**

# Detection Range

Sensor sensitivity can be adjusted by selecting the combination on the DIP switches to fit precisely for each specific application.

	1	2	3		
- 1			•	100%	
II	0			75%	Ä
III	0		0	50%	4
IV	0	0	•	30%	ð
٧	0	0	0	10%	

I - 100%
II - 75%
III - 50%
IV - 30%
V - 10%



# SENSORE DI PRESENZA 103058-UV

**FUOCOFREDDO** 

Via Licinio Ferretti 5/A 43126 Parma (PR) C.F. / P.IVA 02669720340 Tel. 0521.1404565 info@fuocofreddo.it www.fuocofreddo.it

### 2 Hold Time

Select the DIP switch configuration for the light off-time after presence detection.

1		6	5	4	
-	5s	•	•	•	L
	30s	•	0	•	1
Ü	1min	0	0	•	III
	5min	•	•	0	IV
Ó	10min	0	•	0	V
	20min	•	0	0	VI
1	30min	0	0	0	VII

1 - 5s

II - 30s

III - 1 min IV - 5min

V - 10min

VI - 20min VII - 30min

# 3 Daylight Threshold

The sensor will not be triggered if ambient lux level exceeds the daylight threshold preset. For this product, we have set all the threshold setting to "Disable" for better use with UV light where photocell function is not needed.

	7	8	9	
I		•	•	Disable
H	0	•	•	Disable
111	0	•	0	Disable
I۷	0	0	•	Disable
V	0	0	0	Disable

1 - Disable

II - Disable

III – Disable

IV – Disable

V – Disable